



8X8 HDMI™ Matrix Switcher with 3D Support

User's Guide

Model no.

PT-MA-HD88



Designed in Germany

Made in Taiwan

Table of Contents

Section 1: Getting Started.....	3
1. Safety and Notice	3
2. Introduction	3
3. Package Contents	4
4. Before Installation	4
5. Panel Descriptions.....	5
6. Installation	7
7. EDID LEARNING	7
Section 2: Operation approach	8
Section 3: Specifications	18
Section 4: FAQ	19
Section 5: Performance Guide	20

Section 1: Getting Started

1. Safety and Notice

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

The **PT-MA-HD88 8X8 HDMI™ Matrix Switcher with 3D Support** has been tested for conformance to safety regulations and requirements, and has been certified for international use. However, like all electronic equipments, the PT-MA-HD88 should be used with care. Please read and follow the safety instructions to protect yourself from possible injury and to minimize the risk of damage to the unit.

- Follow all instructions and warnings marked on this unit.
- Do not attempt to service this unit yourself, except where explained in this manual.
- Provide proper ventilation and air circulation and do not use near water.
- Keep objects that might damage the device and assure that the placement of this unit is on a stable surface.
- Use only the power adapter and power cords and connection cables designed for this unit.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.

2. Introduction

The **PT-MA-HD88 8X8 HDMI™ Matrix Switcher with 3D Support** provides the most flexible and cost effective solution in the market to route high definition video sources plus multi-channel (up to 7.1-channel) digital audio from any of the four HDMI sources to the remote displays at the same time. This solution is well suited for use in home theater, conference room presentation systems, or other similar setting or application.

- Support HDMI Deep Color & full 3D
- HDCP compliant
- Allows any source to be displayed on multiple displays at the same time
- Allows any HDMI display to view any HDMI source at any time
- Supports 7.1 channel digital audio
- Supports default HDMI EDID and learns the EDID of displays
- The matrix master can switch every output channels to any HDMI inputs by push-in button, IR remote control, RS-232 control, and Ethernet control
- Easy installation with rack-mounting and wall-mounting designs for master and receiver respectively
- Fast response time – 2~5 seconds for channel switch

3. Package Contents

Before you start the installation of the switch, please check the package contents.

— PT-MA-HD88	x1
— Rack-mounting ear set	x1
— IR Remote control*	x1
— IR Receiver	x1
— Power supply unit (+12VDC, 5A)	x1
— Installation software CD	x1
— User's Guide	x1




* Additional IR remote controllers and IR blasters can be purchased as optional accessories to control the HDMI sources located separately.

4. Before Installation

- Put the product in an even and stable location. If the product falls down or drops, it may cause an injury or malfunction.
- Don't place the product in too high temperature (over 50°C), too low temperature (under 0°C) or high humidity.
- Use the DC power supply unit with correct specifications. If inappropriate power supply is used then it may cause a fire.
- Do not twist or pull by force ends of the cable. It can cause malfunction.

5. Panel Descriptions

FRONT PANEL — PT-MA-HD88, transmitting unit (TX)

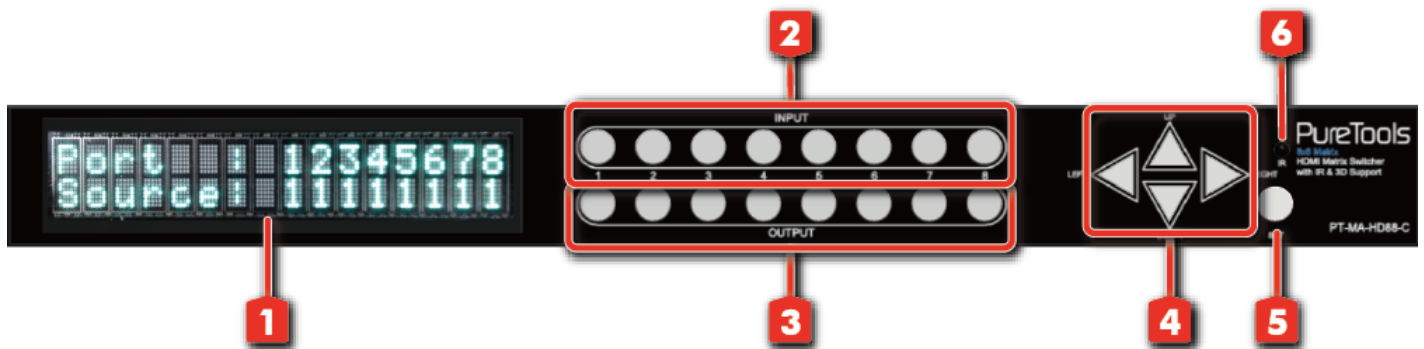

1. VFD window

2. Input Push Button: Front panel push buttons used to select the number of input source & LED display for input channels

3. Output Push Button: Front panel push buttons used to select the number of display channel & LED display for output ports

4. Push Button: Select the needed function

5.SET: To confirm the function which had been selected.

6. IR SENSOR: IR sensor for receiving the IR commands from IR remote

REAR PANEL — PT-MA-HD88, transmitting unit (TX)



7. Power: Power control

8. +12V DC: 12V DC power jack

9. INPUT 1-8: HDMI inputs


10. OUTPUT 1-8: HDMI outputs

11. Ethernet: Ethernet control port

12. System IR Receiver: Ext. IR receiver

13. RS-232: RS-232 control port

FRONT PANEL — PT-MA-HD88, receiving unit (RX)

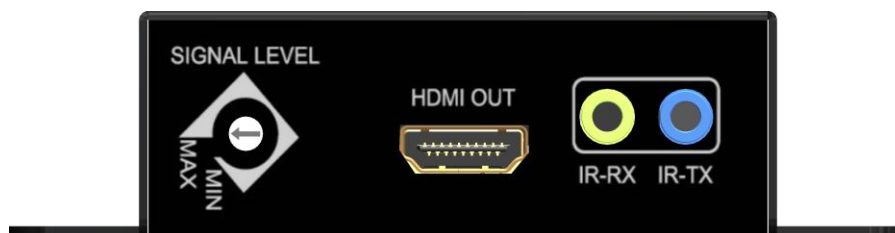

Signal Level: Adjust the 8-level equalization control to the received HDMI signals. The HDMI signal level varies from strongest (0) to weakest (7) for respective transmission length from longest possible range to short distance. Please adjust the signal level from strongest to weakest and stop turning the rotary switch whenever the audio/video is playing normally. Inappropriate signal level setting may cause overpowering issue that would shorten the product life significantly!

HDMI OUT: Connect to HDTV with a HDMI cable

IR RECEIVER: Plug in IR receiver

IR Blaster: Plug in IR blaster

REAR PANEL — PT-MA-HD88, receiving unit (RX)



+5V DC: Connect to 5V DC power supply.

HDMI SIGNAL IN: Plug in a Cat.X cable.

6. Installation

- Connect all sources to HDMI Inputs on the 8x8 HDMI Matrix PT-MA-HD88.
- Connect all display to HDMI Outputs on the 8x8 HDMI Matrix PT-MA-HD88.
- Connect the +12V 5A DC power supply to the 8x8 HDMI Matrix PT-MA-HD88.

7. EDID LEARNING

The EDID learning function is only necessary whenever you encounter any display on the HDMI output port that cannot play audio and video properly. Because the HDMI source devices and displays may have various level of capability in playing audio and video, the general principle is that the source device will output the lowest standards in audio format and video resolutions to be commonly acceptable among all HDMI displays. In this case, a 720p stereo HDMI signal output would be probably the safest choice. Nevertheless, the user can force the matrix to learn the EDID of the lowest capable HDMI display among others to make sure all displays are capable to play the HDMI signals normally.

There are **eight embedded default EDID** as below,

- Full-HD(1080p@60)-24bit 2D & 2ch
- Full-HD(1080p@60)-24bit 2D & 7.1ch
- Full-HD(1080p@60)-24bit 3D & 2ch
- Full-HD(1080p@60)-24bit 3D & 7.1ch
- HD(1080i@60)(720p@60)-24bit 2D & 2ch
- HD(1080i@60)(720p@60)-24bit 2D & 7.1ch
- Full-HD(1080p@60)-36bit 2D & 2ch
- Full-HD(1080p@60)-36bit 2D & 7.1ch

Section 2: Operation approach

Mode Selection

Pressing UP(↑) or DOWN(↓) button to select among 4 different modes – Save Mapping Mode, Preset Mapping Mode, Default EDID Mode, EDID Learning Mode, and Status Mode



1. Save Mapping Mode

- 1) Pushing “Left (←)” button, to enter the Save Mapping Mode.



- 2) Use the “Right (→)” input push button to get into the selection of the mapping configuration, and use “UP (↑) & DOWN (↓)” (1~8) to choose which set you want to save current input/output mapping



- 3) After you select the desired mapping configuration number, the number will be twinkled. Then, press the SET button, the setting will be saved successfully.
- 4) press LEFT(←) button to go back to pre-layer

2. Preset Mapping Mode

- 1) Pushing “Left (←)” button, and use DOWN (↓) button to enter the Preset Mapping Mode.



- 2) Use the “Right (→)” input push button to get into the selection of the saved mapping configuration, and use “UP (↑) & DOWN (↓)” (1~8) to choose which mapping you want



- 3) After you select the desired mapping configuration number, the number will be twinkled. Then, press the SET button, the device will show the selected mapping.
- 4) press LEFT(←) button to go back to pre-layer

3. Default EDID Mode

- 1) Select Default EDID Mode and press RIGHT(→) button to enter this mode



- 2) Press UP(↑) and DOWN(↓) button to select the default EDID mode(1~8)



- 3) Press LEFT(←) button to go back to pre-layer
- 4) Press UP(↑) and DOWN(↓) button to select which input will be applied
- 5) Press SET button to confirm, and VFD will show OK or FAIL after setting
- 6) Or press LEFT(←) button to go back to pre-layer

4. EDID Learning Mode (OUTOUT EDID)

- 1) Select EDID Learning Mode and press RIGHT(→) button to enter this mode




- 2) Press UP(↑) and DOWN(↓) button to select which input will learn the EDID from EDID port




- 3) Press SET button to confirm; or press LEFT(←) button to go back to pre-layer
- 4) If confirmed, VFD will show SUCCEED or FAIL after learning

Method B: IR Remote Control

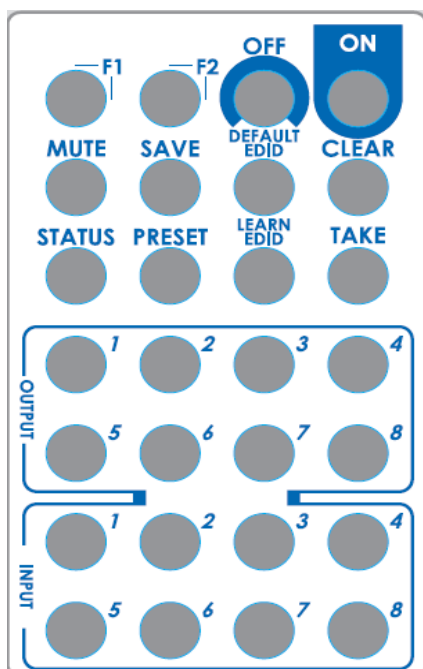

1. IN/OUT Switch

Operation	Procedure	7-Segment LED
IN/OUT Switch	Output Number (1~8) + Input Number (1~8)	
Ex: Input 2 To Output 3	1. Press output number key "3" to select Output 3	3 -
	2. Press input number key "2" to select Input 2	3 2

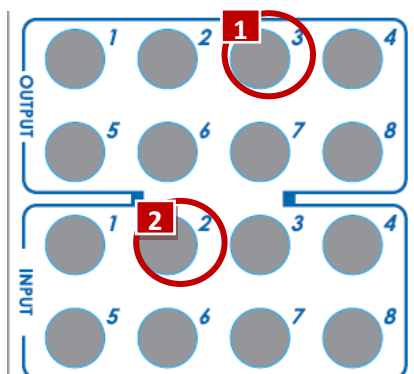

2. Function Key


Button	Function
OFF	Standby mode
ON	Power on the matrix switcher
MUTE	Turn off output's video and audio
STATUS	Preset output status
SAVE	Save current mapping mode
PRESET	Preset mapping mode
DEFAULT EDID	Begin default EDID selection
LEARN EDID	Begin EDID learning from one output
CLEAR	Clear the previous IR operation procedure
TAKE	Trigger the previous setting
F1	Reserved
F2	Reserved

Operation	Procedure	VFD Window
Mute Output	Mute + A~H(Output 1~8) + Take	
Ex: Mute Output 3	1. Press "MUTE" button	Mute A~H Take OUTPUT: -
	2. Press number key "C" to select Output 3	Mute A~H Take OUTPUT: 3
	3. Press "TAKE" button	Port : 1234 Source: 2202
Output Status	Status + A~H(Output 1~8) + Take	
Ex: Output 4 (Input 2)	1. Press "STATUS" button	Status A~H Take OUTPUT:- IN:-
	2. Press number key "D" to select Output 4	Status A~H Take OUTPUT: 4 IN:-
	3. Press "TAKE" button	Status A~H Take OUTPUT: 4 IN:2
Save Current Mapping	Save + A~H(1-8 storage site) + Take	
Ex: Save current mapping to 5	1. Press "SAVE" button	Save A~H Take Save(1~8): -
	2. Press number key "E" to select the storage site 5	Save A~H Take Save(1~8): 5
	3. Press "TAKE" button	Save A~H Take Save(1~8): 5
Preset Mapping	Preset + A~H(1-8 storage site) + Take	
Ex: Preset saved mapping from 5	1. Press "PRESET" button	Preset A~H Take PRESET(1~8):-
	2. Press number key "E" to select the storage site 5	Preset A~H Take PRESET(1~8): 5
	3. Press "TAKE" button	Preset A~H Take PRESET(1~8): 5
Learn default EDID	Default EDID + A~H (1-8 storage site)+ 1~VIII(input 1~8) + Take	
Ex: Default EDID 2 Input 3	1. Press "DEFAULT EDID" button	DefA~H I ~VIII Take from : - to IN:-
	2. Press number key "B" to select default EDID 2	DefA~H I ~VIII Take from : 2 to IN:-
	3. Press number key "III" to select Input 3	DefA~H I ~VIII Take from : 2 to IN:3
	4. Press "TAKE" button	DefA~H I ~VIII Take from : 2 to IN:3
Learn EDID Port EDID	Learn + D(EDID Port) + I ~VIII (input 1~8) + Take	
Ex: Learn EDID Port Input 3	1. Press "LEARN" button	OUT A~D I ~VIII Take From : 0 to IN:0
	2. Press number key "D" to select EDID Port	OUT A~D I ~VIII Take From : 4 to IN:0
	3. Press number key "III" to select Input 3	OUT A~D I ~VIII Take From : 4 to IN: 3
	4. Press "TAKE" button	OUT A~D I ~VIII Take From : 4 to IN:3

Method C: Software Control through RS-232 port

1. System Requirement

- 1) OS Information: MS WinXP/7
- 2) Baud rates: 9600
- 3) Software size: 3 MB
- 4) Minimum RAM requirement: 256 MB

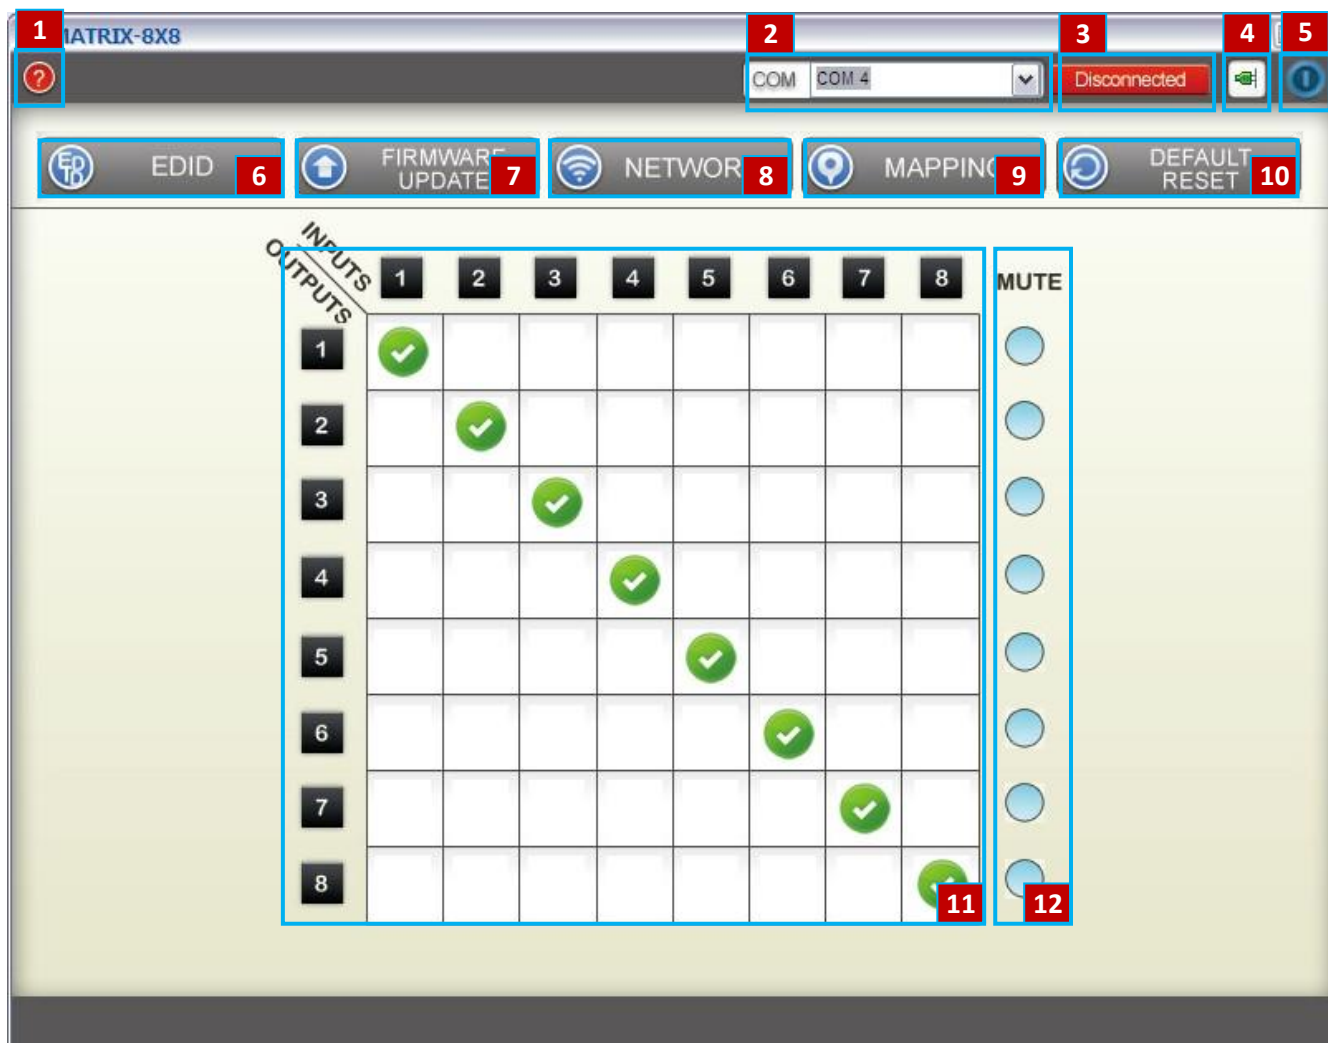

1 FW/SW Version Button

2 COM Port Selection

3 Connection Status

4 Connect/Disconnect Button

5 Power On/Off Button

6 EDID Button

7 Firmware Update Button

8 Network Button

9 Mapping Button

10 Default Reset Button

11 In/Out Switch Button


12 Mute Output Button

2. Step by step for connecting matrix and controller


Step1: Use RS-232 cable to connect the RS-232 port on matrix and controller


Step2: Open the software and then choose the correct com port

Step3: Click connection button “”


Step4: Make sure the connection status is on connected status “”


3. FW/SW Version Button

Click “” button to show version information

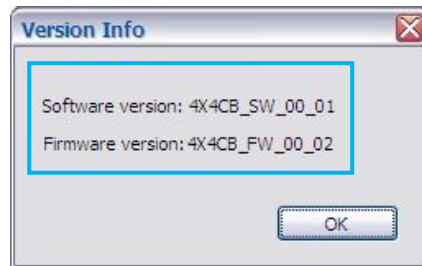

4. COM Port Selection

Click “” button to select COM Port

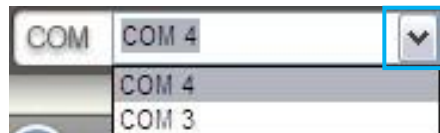


5. Connection Status



1) Connected Status:



 
2) Connecting Status:



3) Disconnected Status:



6. Connect/Disconnect Button

 
Click this button “” to change connection status




7. Power On/Off Button


Click this button to power on/off




“” **Power on status(Blue)**: Click this button to power off device(Standby Mode)

“” **Power off status(Red)**: Click this button to power on device


8. EDID Button

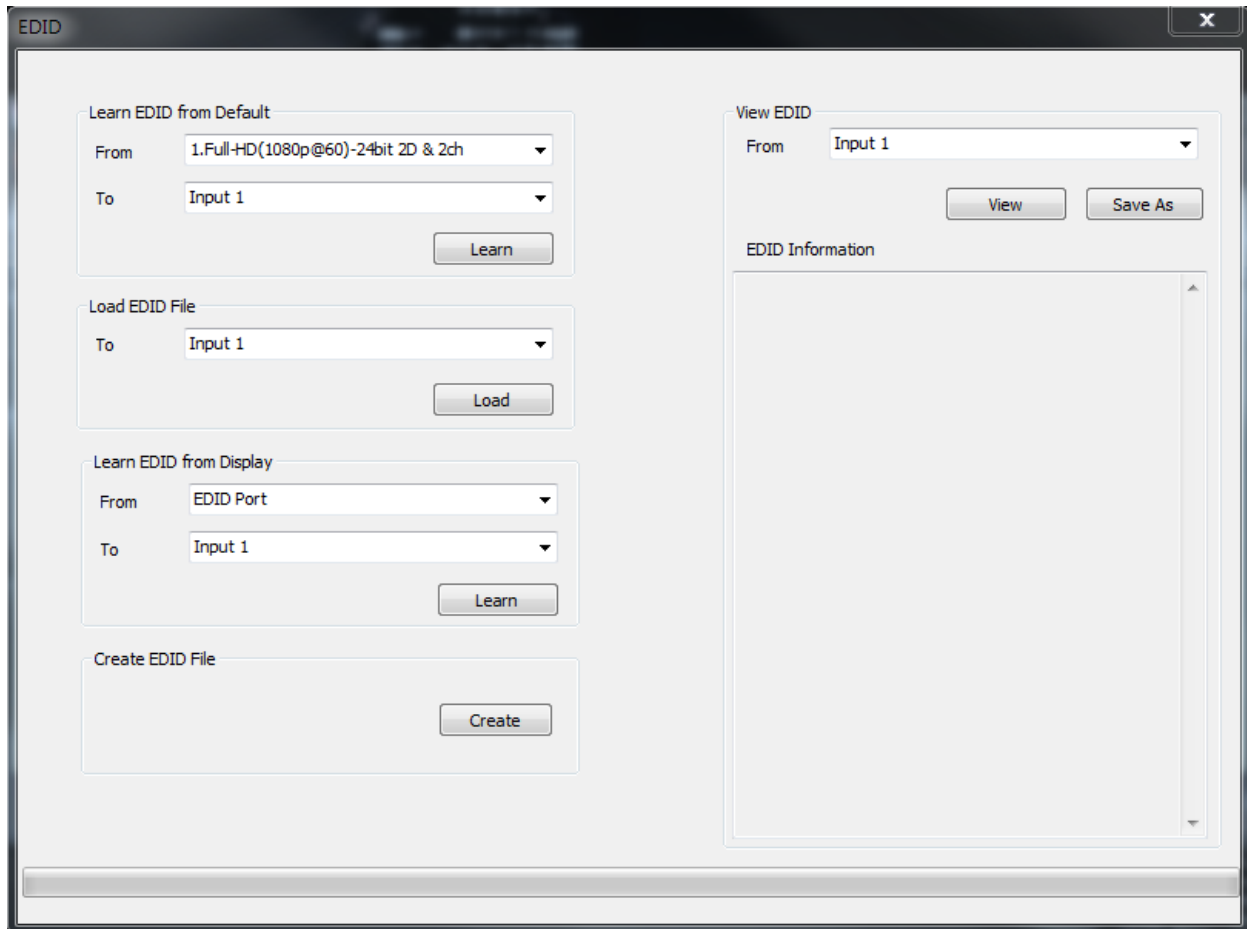

- 1) Learn EDID from Default
 - a) Select Default EDID(1-8 Default EDID)
 - b) Select Input
 - c) Click "Learn" button to learn default EDID
- 2) Load EDID File to Input
 - a) Select Input
 - b) Click "Load" button to select the EDID file
- 3) Learn EDID From Display
 - a) Select EDID Port
 - b) Select Input
 - c) Click "Learn" button to learn display EDID
- 4) Create EDID File
 - a) Click "Create" button to create EDID file

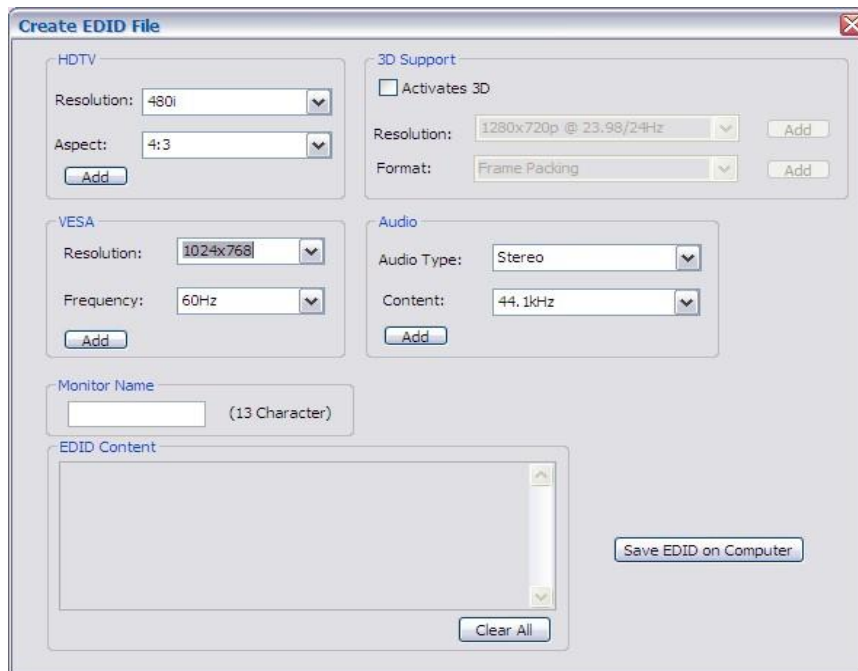


- b) Select the EDID content
 - c) Click "Save EDID on Computer" to save the generated EDID as a file
- 5) View EDID Content
- a) Select Input, or From File
 - b) Click "View" button to read the EDID and analysis

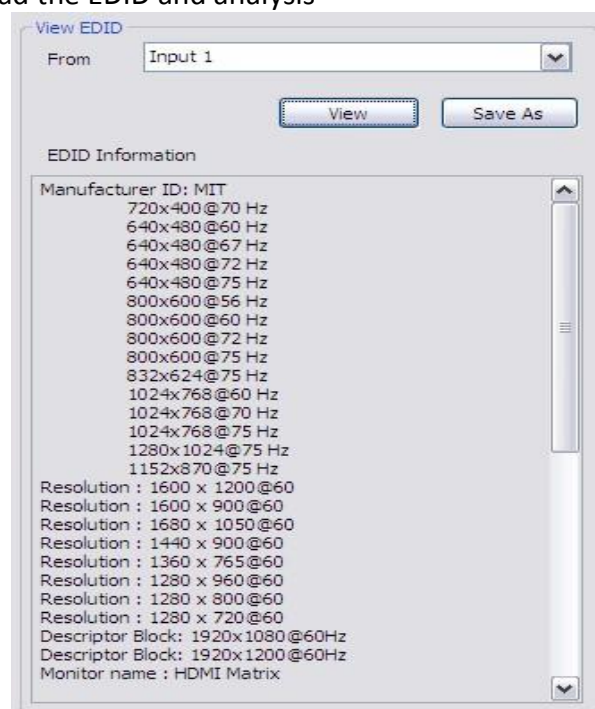


- c) Click "Save As" to save the read EDID as a file on computer

9. Firmware Update Button

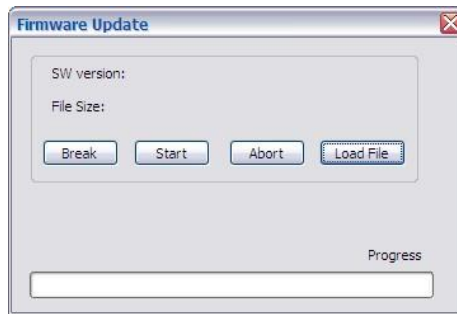


- 1) Click "Load File" to select the firmware file which you want to update
- 2) Click "Break" button
- 3) Quickly remove and reconnect the power input connector
- 4) Click "Start" button to begin the firmware update

10. Network Button

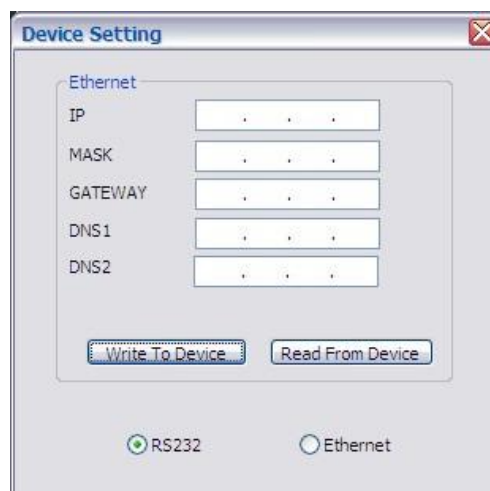

- 1) Click "Read From Device" to read the device IP address
- 2) Select "Ethernet" and then will be a pop-up windows
- 3) Key in the device IP address to the pop-up windows
- 4) Close the pop-up windows
- 5) Click the connected button to connect

11. Mapping Button

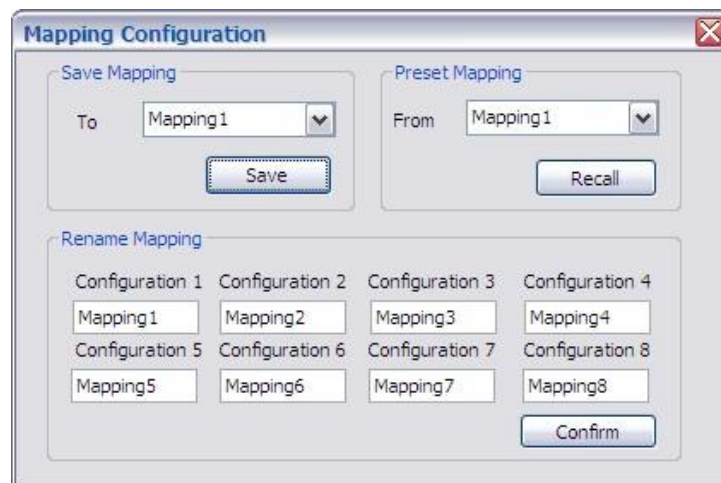

- 1) Save Mapping:
 - a) Select Mapping(1-8)
 - b) Click "Save" button to save current mapping

- 2) Preset Mapping:
 - a) Select Mapping(1-8)
 - b) Click "Recall" button to recall previous mapping which are saved
- 3) Rename Mapping:
 - a) Rename the mapping(Mapping1-Mapping8)
 - b) Click "Confirm" button to confirm the change


12. Default Reset Button

Click this button to do factory default reset

The default reset process will take about 80~90 seconds


13. In/Out Switch Button

Click the button on the checkerboard to select Input & Output port

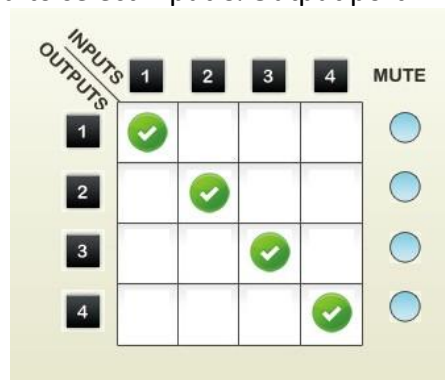

User can click the input number button to let all outputs select the same input


Ex: All outputs select input 3

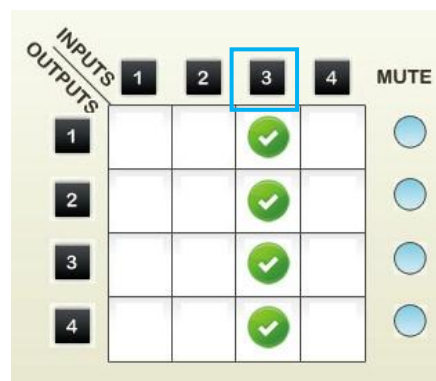

14. Mute Output Button

Click the circle button to turn off output's video and audio

Ex: Mute Output 2

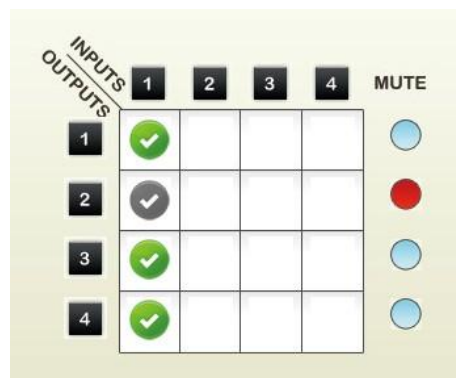

Section 3: Specifications

Item	Description	
Units	Transmitting unit of PT-MA-HD88	Receiving unit of PT-E-HD10
Unit Description	Transmitter	Receiver
HDMI Compliance	HDMI Deep Color & full 3D	
HDCP Compliance	Yes	
Video Bandwidth	Single-link 225MHz [6.75Gbps]	
Supported Resolutions	480i / 480p / 720p / 1080i / 1080p60 36-bit color	
Audio support	Surround sound (up to 7.1ch) or stereo digital audio	
ESD Protection	— Human body model — $\pm 19\text{kV}$ (air-gap discharge) & $\pm 12\text{kV}$ (contact discharge) — Core chipset — $\pm 8\text{kV}$	
PCB stack-up	4-layer board [impedance control — differential 100 Ω ; single 50 Ω]	
Input	8x HDMI / 1x RS-232 / 1x Ethernet 1x IR socket for IR receiver	1x RJ-45 / 1x IR socket for IR receiver
Output	8x HDMI	1x HDMI / 1x IR socket for IR blaster
HDMI Input selection	Push-in button / IR remote control / RS-232 control / Ethernet control	IR remote control
IR remote control	Electro-optical characteristics: $\pi = 25^\circ$ / Carrier frequency: 38kHz	
HDMI connector	Type A [19-pin female]	
RJ-45 connector	WE/SS 8P8C with 2 LED indicators	
RS-232 connector	DE-9 [9-pin D-sub female]	
3.5mm connector	[System IR] Receives IR commands from remote control	

Environmental

Operating Temperature	0~40°C [32~104°F]
Storage Temperature	-20~60°C [-4~140°F]
Relative Humidity	20~90% RH (no condensation)

Section 4: FAQ

Q The quality of output video is not good enough, how can I do?

A Please adjust the 8-level equalization on the receiver units. The HDMI signal level varies from 0 (strongest) to 7 (weakest) for respective transmission length from longest possible range to short distance. It is recommended to switch from 7 to 0 to find the optimal visual experience.

Q Can I use any kind of LAN cable?

A Please check the NOTICE section for more information about how to pick up a suitable cable.

Q Can every TV work with the HDMI matrix?

A Basically, the answer is YES. But if your TV can not support 1080p, please refer the EDID LEARNING section to learn EDID from your TV.

Q What is EDID? Why do I need to learn EDID?

A EDID contains the whole information of the display such as the resolution and audio setting which this display can support. Therefore, based on the EDID information, media player will pick up the most suitable resolution and audio setting to the display. In order to faithfully transmit the EDID information from display to the media player, learning EDID from display to this device is necessary.

Q What should I do to learn EDID for the matrix?

A Due to the limitation of HDMI, the source device can only output one format of video and audio. In other words, the source device cannot output 720p and 1080p video at the same time, or output stereo and surround sound at the same time. Therefore, you may need to manually setup each HDMI input for desirable audio/video output format. The mechanism of EDID Learning is to pick up the HDMI display with the lowest capability among the ones you would use for this input source. For example, if user would like to play the Input-2 upon output-2, output-3 and output-4, and only output-3 cannot support 1080p [support up to 720p only], please learn the EDID from the display connected to the output-3 at the Input-2 port. Of course, if output-3 would get the HDMI signals from every HDMI input, please learn EDID information from output3 to all four HDMI inputs. For more information about EDID Learning, please refer to EDID LEARNING section.

Q My TV can support 1080p, but why there is no audio?

A The factory default EDID of this device is 1080p & 2ch audio. However, there would be a problem after you change to use 1080p & 7.1ch if the TV cannot support 7.1ch audio. Please use the default EDID, 1080p & 2ch audio.

Q When I set an audio amplifier (AV receiver) between TV and the matrix to extract 7.1ch audio, but why there is still no audio?

A Basically, the default EDID of the chosen input can support 7.1ch audio, but the problem is that the EDID of the amplifier still cannot match the default setting. Therefore, the best method is to learn EDID from the amplifier directly. Please refer to EDID LEARNING section and follow the steps to learn the EDID. When learning EDID from the amplifier, user just needs to connect the matrix and amplifier. **Please don't connect HDMI cable between amplifier and TV when the EDID learning is proceeding.**

Q When I play the same content upon multi-displays, why only the TV equipped with amplifier can have 7.1ch audio, and the others don't have 7.1ch audio even no stereo?

A Due to the limitation of HDMI, the source only can choose one video and one audio format to play, which can be either 1080p and 7.1ch or 1080p and stereo audio. It means when the user sets the matrix at 1080p and 7.1ch, the source will only play the content under this format. Therefore if the TV cannot decode 7.1ch audio, there is definitely no audio.

Section 5: Performance Guide

Performance rating		Type of CAT5/6 cable		
Wiring	Shielding	CAT5	CAT5e	CAT6
Solid	Unshielded (UTP)	★★★	★★★★	★★★★★
	Shielded (STP)	★★★	★★★	★★★★★
Stranded	Unshielded (UTP)	★	★★	★★
	Shielded (STP)	★	★	★★
Termination		Please use EIA/TIA-568-B termination (T568B) at any time		

